

MIRROR IMAGE TELEPROMPTERS, INC.
MIRROR IMAGE

Set up Instructions for SP-LCD Speechprompters

Mirror Image Teleprompters, Inc
2189 Abraham Lane
Oshkosh, WI 54904

Phone 920-232-0220

Email: sales@teleprompters.com


www.teleprompters.com



MIRROR IMAGE TELEPROMPTERS, INC.

MIRROR IMAGE

SP-LCD

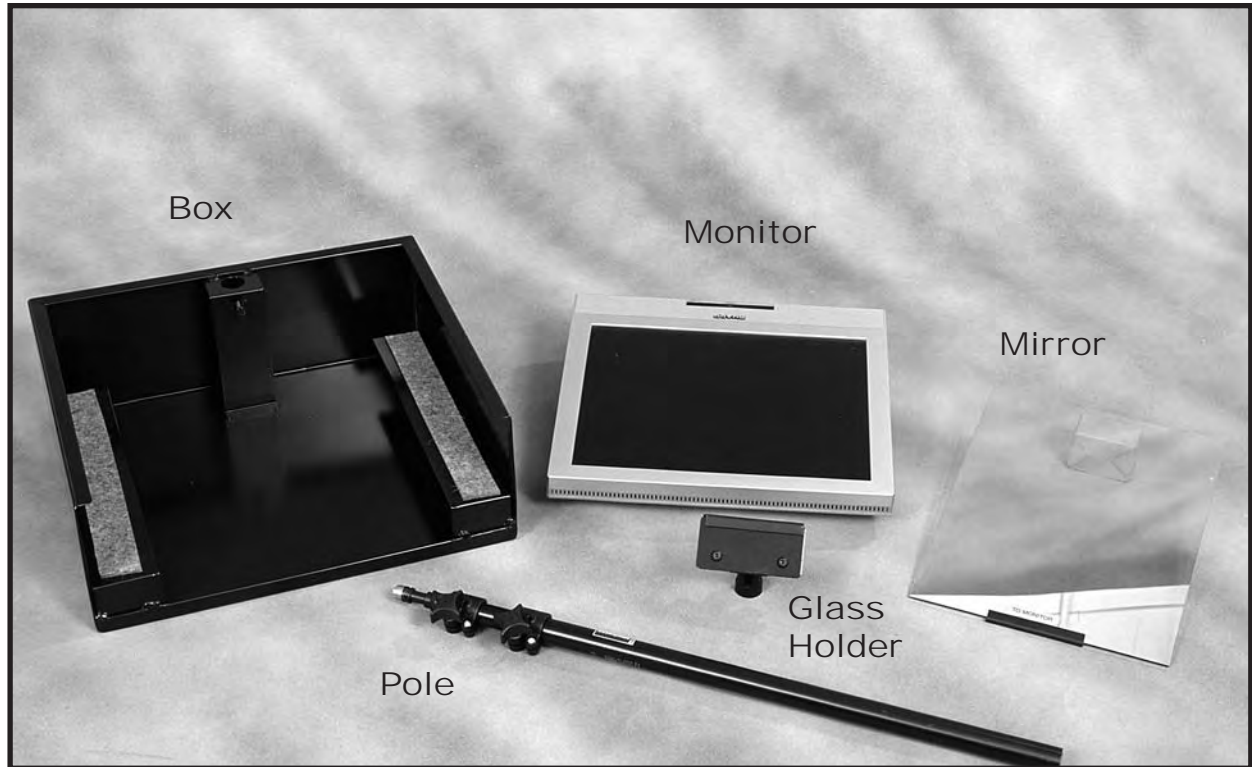

Step 1:

Place box on floor with open side toward podium.

SP-LCD



Step 2:

Insert pole into box. Tighten plastic knob to hold pole in place.

Step 3:

Attach VGA or video cables to monitor.

* SP-150/180-LCD requires the use of the MI Reverse Amp/Splitter.



Step 4:

Screw glass holder onto top of pole. Place monitor in box with base edge and menu buttons toward pole.

SP-LCD



Step 5:

Slide mirror into glass holder and tighten knobs. Prompter should be approximately arms length from podium at 45 degree angle.

Step 6:

Connect cables to your computer (SP-150/180-LCD requires the MI-reverse box to be connected in line), splitter, and power supply.

Test the monitor and mirror to be sure that the image aligns properly.